

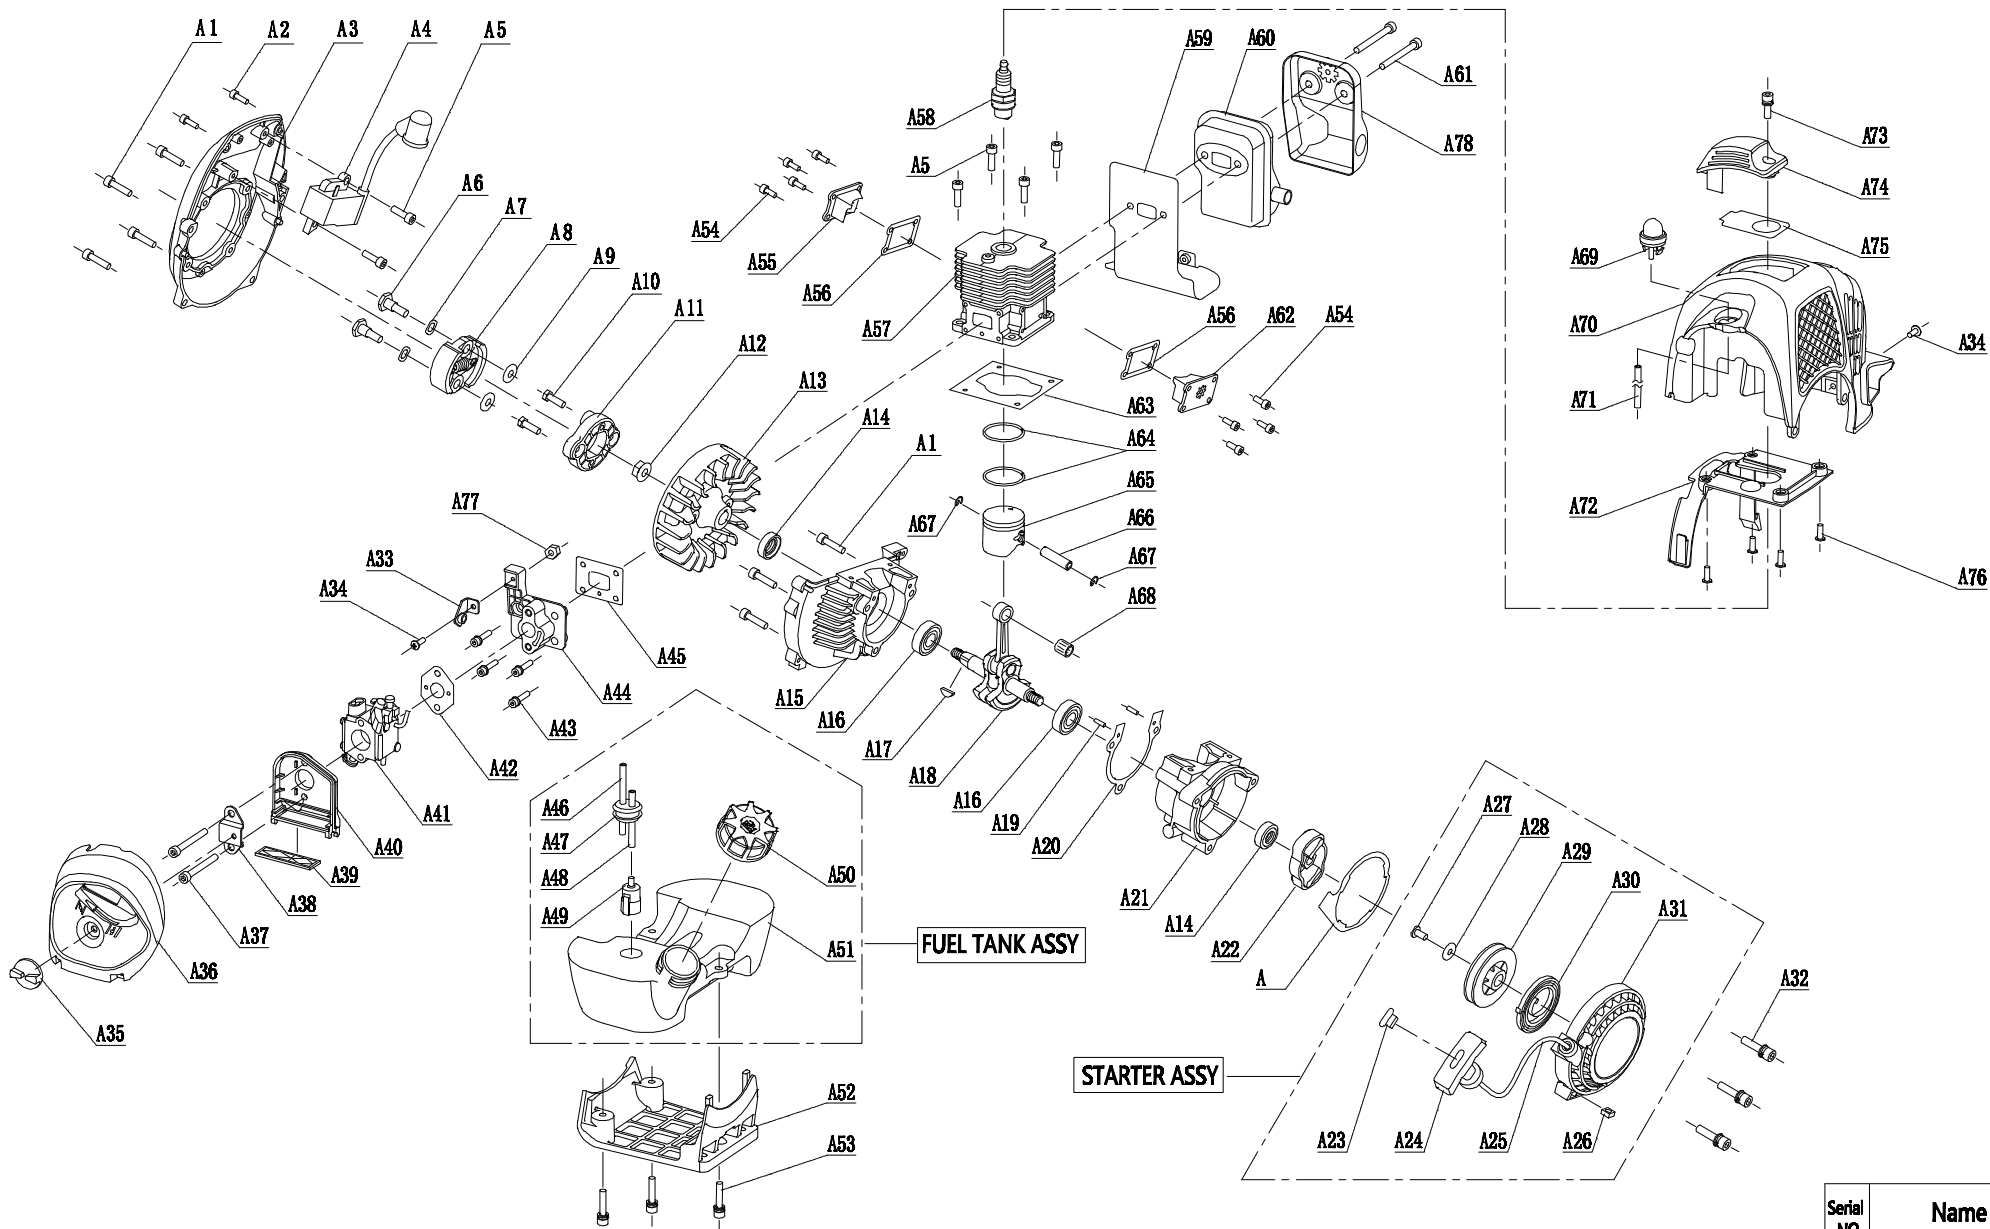


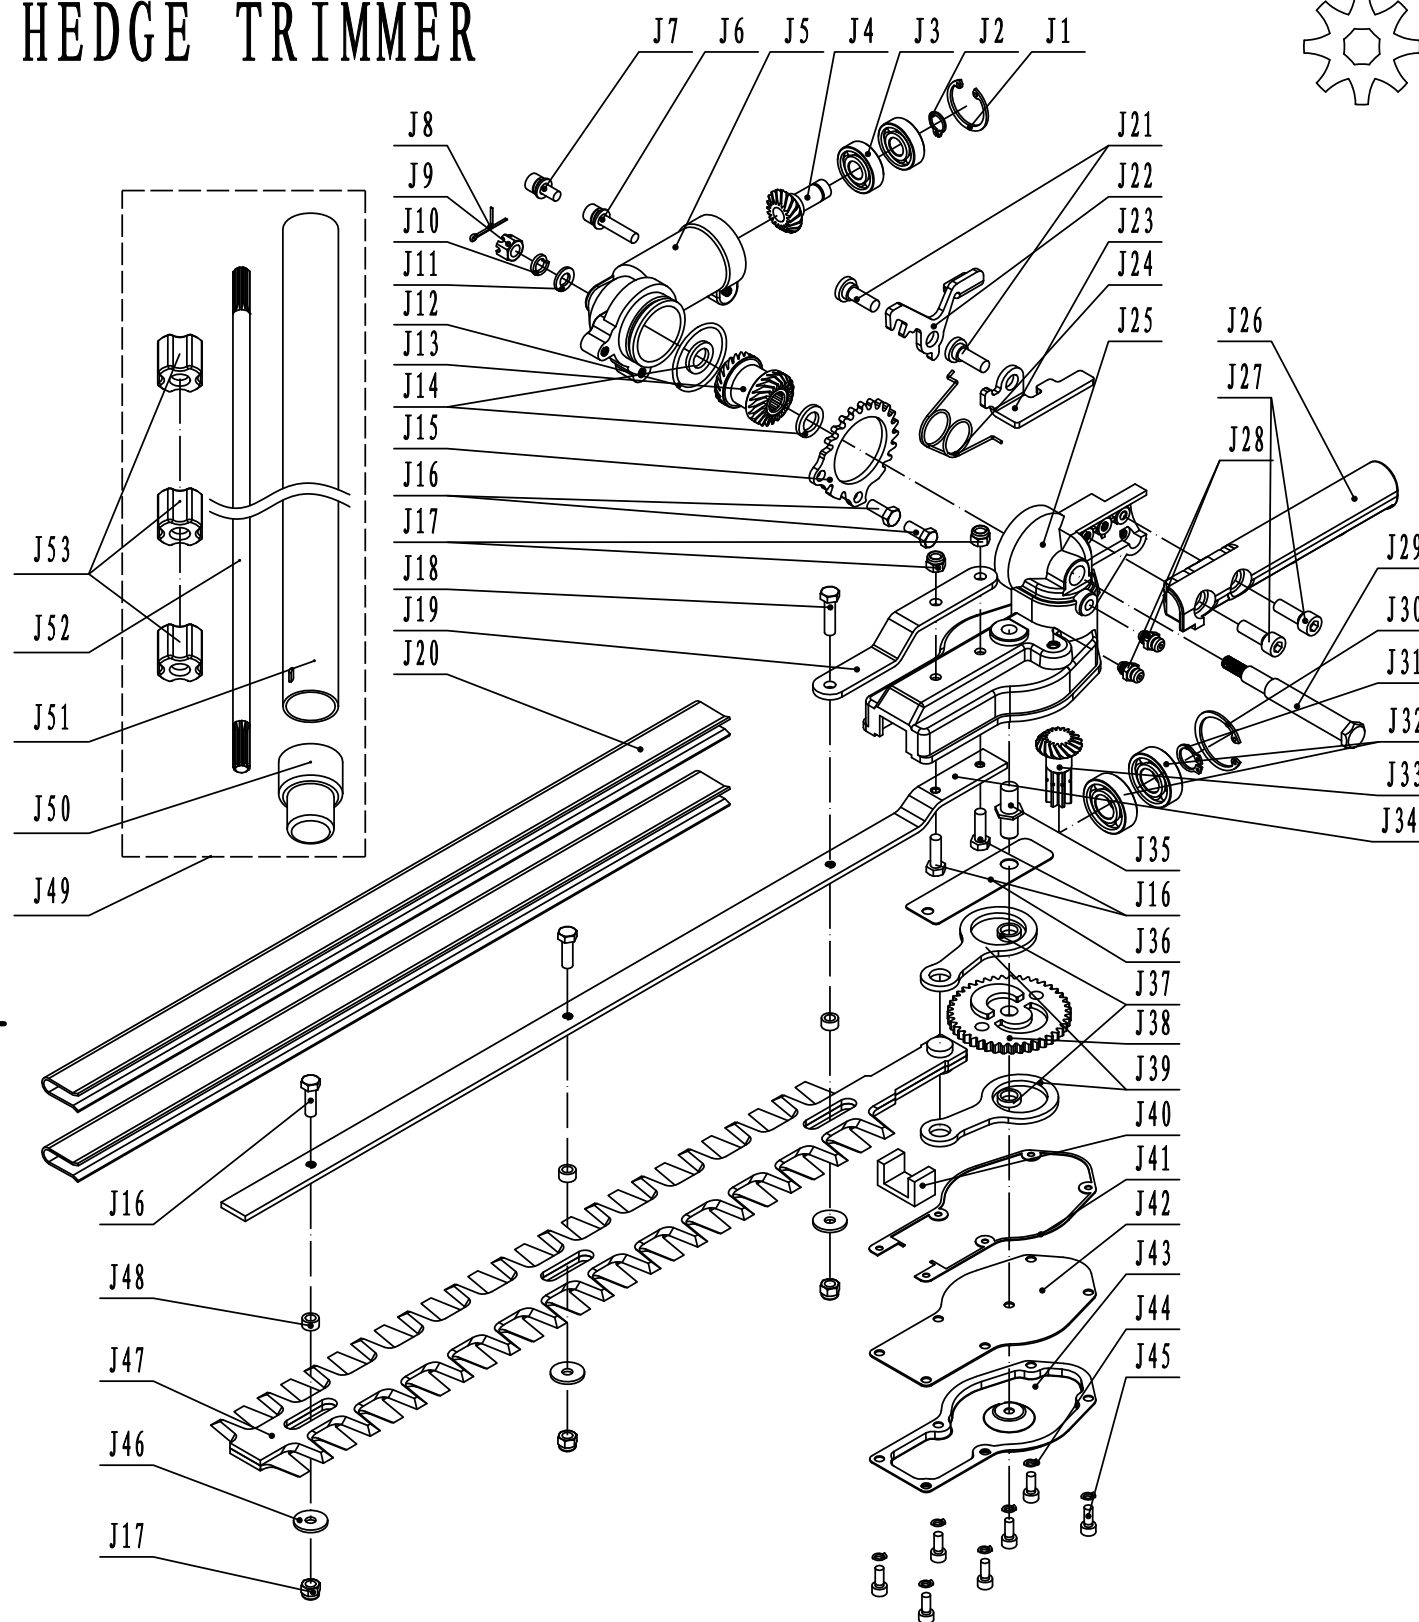


																					Serial NO	Name	Qty
A71	Oil pipe 2.5x5x60	1	A61	Inner hexagon screw M5X50	2	A51	Fuel tank assy	1	A41	Carburetor	1	A31	Start cover	1	A21	Lift crankcase	1	A11	Clutch support	1	A1	Inner hexagon screw M5X20	7
A72	Guiding plate	1	A62	Left scavenging port cap	1	A52	Fuel tank support	1	A42	Gasket of carburetor	1	A32	Inner hexagon screw M6X25	3	A22	Start plate	1	A12	Hexagon flange nut M8X1	1	A2	Inner hexagon screw M4X12	2
A73	Inner hexagon screw M5X16	1	A63	Washer of cylinder	1	A53	Inner hexagon screw M5X25	3	A43	Inner hexagon screw M4X20	4	A33	Throttle line jacket	1	A23	Rope jacket	1	A13	Flywheel	1	A3	Side cover	1
A74	Spark plug cap	1	A64	Piston ring	2	A54	Inner hexagon screw M4X12	8	A44	Inlet pipe	8	A34	Crossed discal screw M4X10	2	A24	Start knob	1	A14	Oil seal 12x22x7	2	A4	Ignition coil	1
A75	Spark plug cap washer	1	A65	Piston	1	A55	Right scavenging port cap	1	A45	Gasket of inlet pipe	1	A35	Air filter fixed nut	1	A25	Rope 3x800	1	A15	Right crankcase	1	A5	Inner hexagon screw M5X16	6
A76	Self-tapping screw ST4.2X12	4	A66	Piston pin	1	A56	Scavenging port cap washer	2	A46	Fuelreturn pipe 2.5x5x180	1	A36	Air filter cover	1	A26	Square nut M5	1	A16	Bearing 6001(12x28x8)	2	A6	Clutch bolt M6	2
A77	Hexagon nut M4	1	A67	Piston nap	2	A57	Cylinder	1	A47	Fuel pipe support	1	A37	Inner hexagon screw M5X45	2	A27	Crossed discal screw M5X10	1	A17	Half-roung key 3x5x13	1	A7	wave washer 8X13X0.5	2
A78	Muffler heat insulation cover	1	A68	Needle bearing 8X11X11	1	A58	Spark plug (BM6A)	1	A48	Fuel pipe 3x5x160	1	A38	Air filter plate	1	A28	Washer 5.2x15.1.5	1	A18	Crankshaft	1	A8	Clutch	1
			A69	Primer bubble	1	A59	Muffler washer	1	A49	Fuel filter	1	A39	Strainer	1	A29	Start rope wheel	1	A19	Round pin 5x10	2	A9	Washer 6.5X18X1.5	2
			A70	Top cover	1	A60	Muffler	1	A50	Fuel tank cap assy	1	A40	Air filter support	1	A30	Start spring	1	A20	Gasket of crankcase	1	A10	Outer hexagon bolt M5X16	2


HEDGE TRIMMER

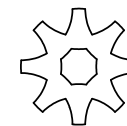


J53	Oil bearing	3	J43	Cover, gear case	1	J32	6001 bearing	2	J21	M6 Screw	2	J10	M6 washer	1	
J52	Transmission shaft	1	J42	Protector	1	J31	Φ12 ring	1	J20	Blade cover	2	J9	M6 Nut	1	
J51	Pipe	1	J41	Gasket, gear case	1	J30	Φ28 snap ring	1	J19	Plate	1	J8	Pin	1	
J50	Stopper	1	J40	Felt	1	J29	Shaft, gear case	1	J18	M5×20 screw	1	J7	M5×12 screw	1	
J49	Working shaft	1	J39	Transmission link	2	J28	Grease fitting	2	J17	M5 Nut	5	J6	M5×25 screw	1	
J48	Nut	3	J38	Gear	1	J27	M5×18 screw	2	J16	M5×16 screw	6	J5	Gear case	1	
J47	Blade	1	J37	Washer	2	J26	Rotating handle	1	J15	Spacer gear	1	J4	Gear	1	
J46	Φ16×Φ5.2×1.5 washer	3	J36	Gasket	1	J25	Gear case	1	J14	Washer	2	J3	Bearing 609	2	
J45	M4×10 screw	7	J35	Crank shaft	1	J24	Spring	1	J13	Gear	1	J2	Φ9 ring	1	
J44	M4 Gasket	7	J34	Guide plate	1	J23	Lever	1	J12	Seal ring	1	J1	Φ24 snap ring	1	
			J33	Transmission gear	1	J22	Angel adjuster	1	J11	M6 washer	1				
												NO.	Description	Qty	Note

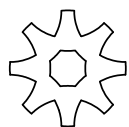


PRUNER

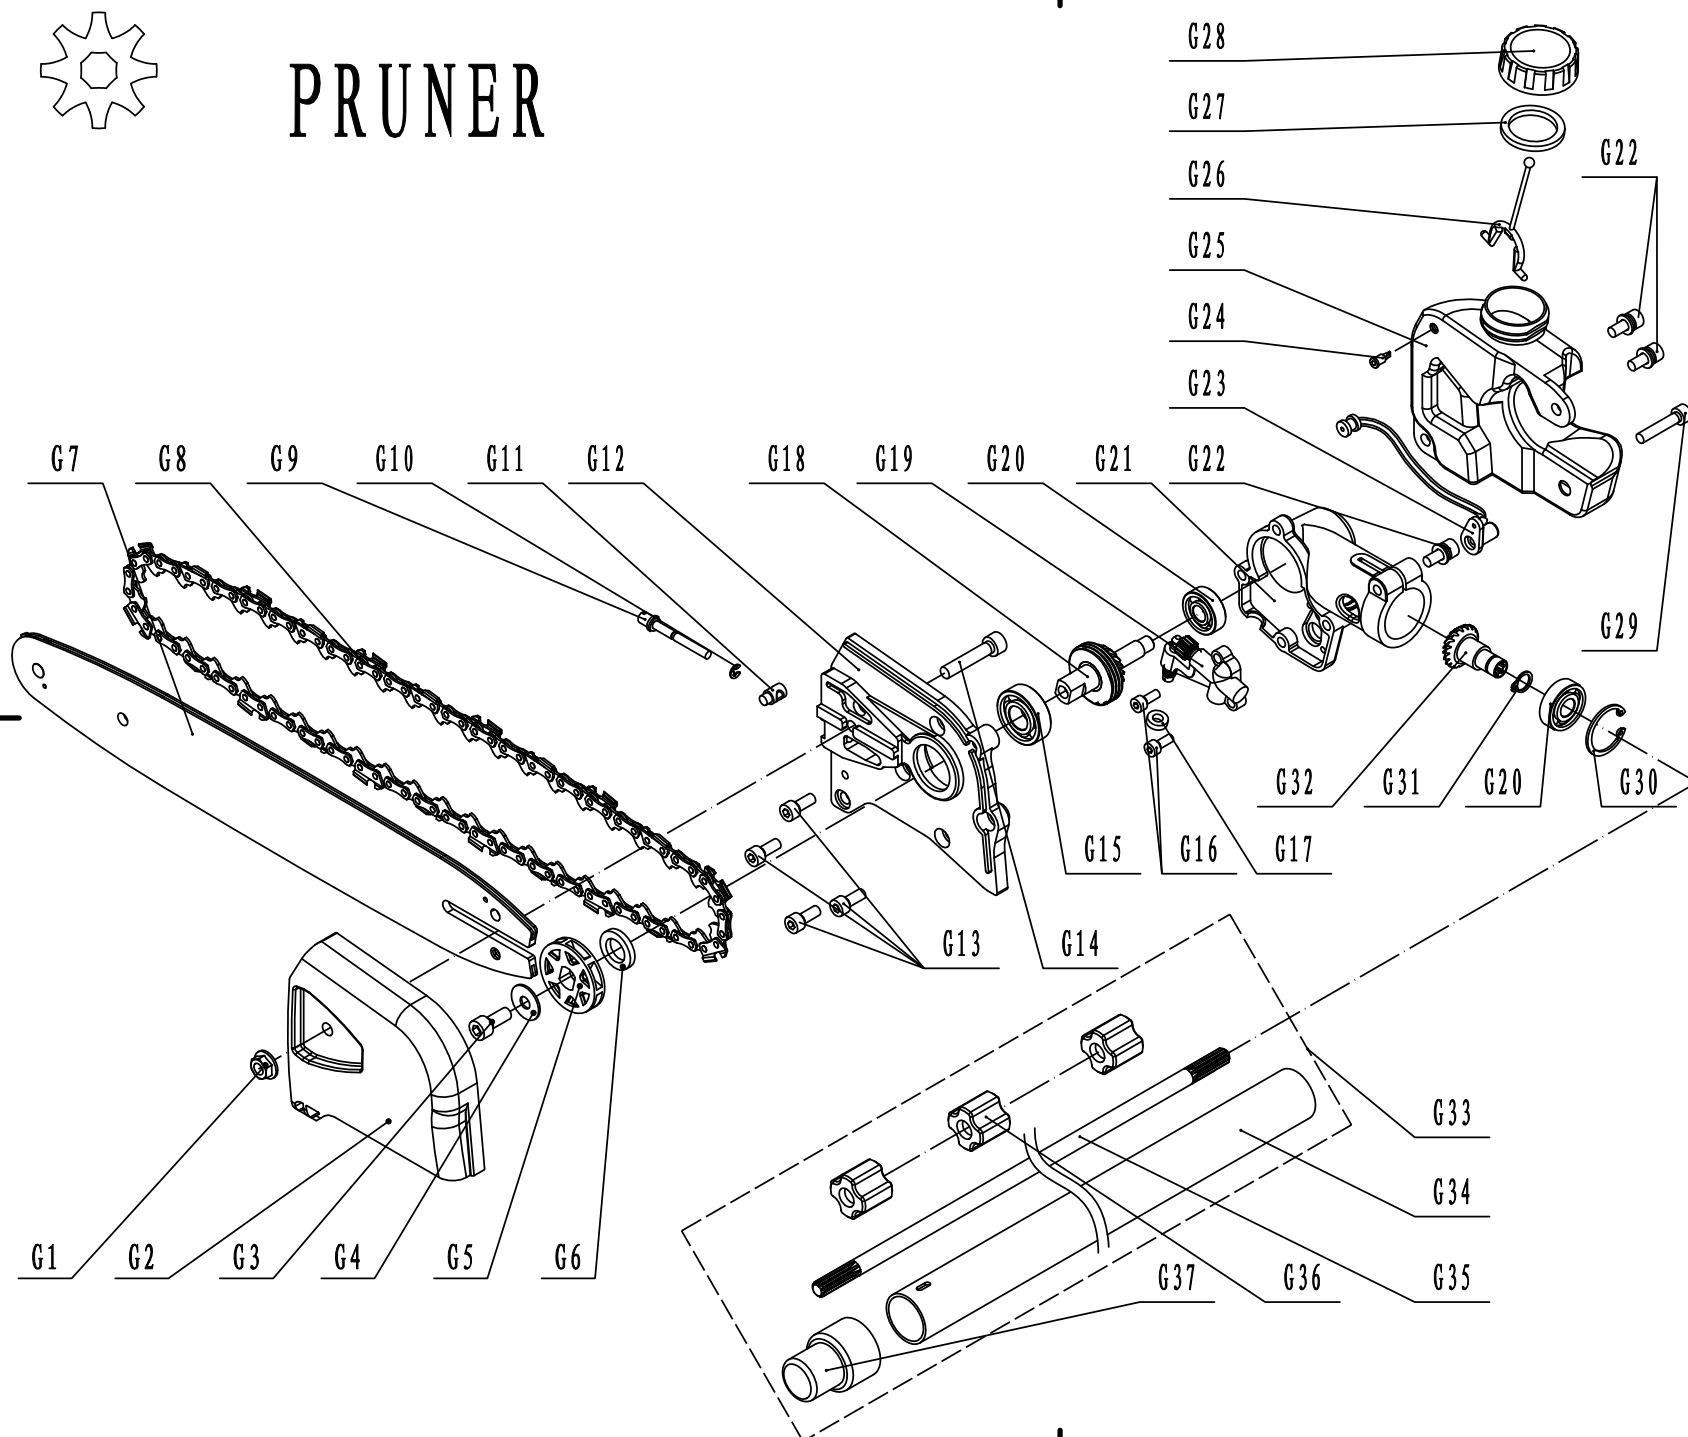

G37	Stopper	1	
G36	Oil bearing	3	
G35	Transmission shaft	1	
G34	Pipe	1	
G33	Working shaft	1	
G32	Transmission gear	1	
G31	Φ9 ring	1	
G30	Φ24 snap ring	1	
G29	M5×25 screw	1	
G28	Oil tank cap	1	
G27	Gasket,oil tank	1	
G26	Hook,oil tank	1	
G25	Oil tank	1	
G24	Valve	1	
G23	Oil pipe	1	
G22	M5×12 screw	3	
G21	Gear case	1	
G20	Bearing 627	2	
G19	Oil pump	1	
G18	Gear shaft	1	
G17	Gasket	1	
G16	M4×10 screw	2	
G15	6001 bearing	1	
G14	M6×35 screw	1	
G13	M5×12 screw	4	
G12	Cover,Gear case	1	
G11	Nut,tensioner	1	
G10	Φ3 ring	1	
G9	Screw,tensioner	1	
G8	Chain	1	
G7	Guide bar	1	
G6	Gasket,bearing	1	
G5	Sprocket	1	
G4	Φ5 washer	1	
G3	M6×14 screw	1	
G2	Bar cover	1	
G1	M6 nut	1	
NO.	Description	QTY	NOTE

 


TRIMMER/CUTTER SHAFT

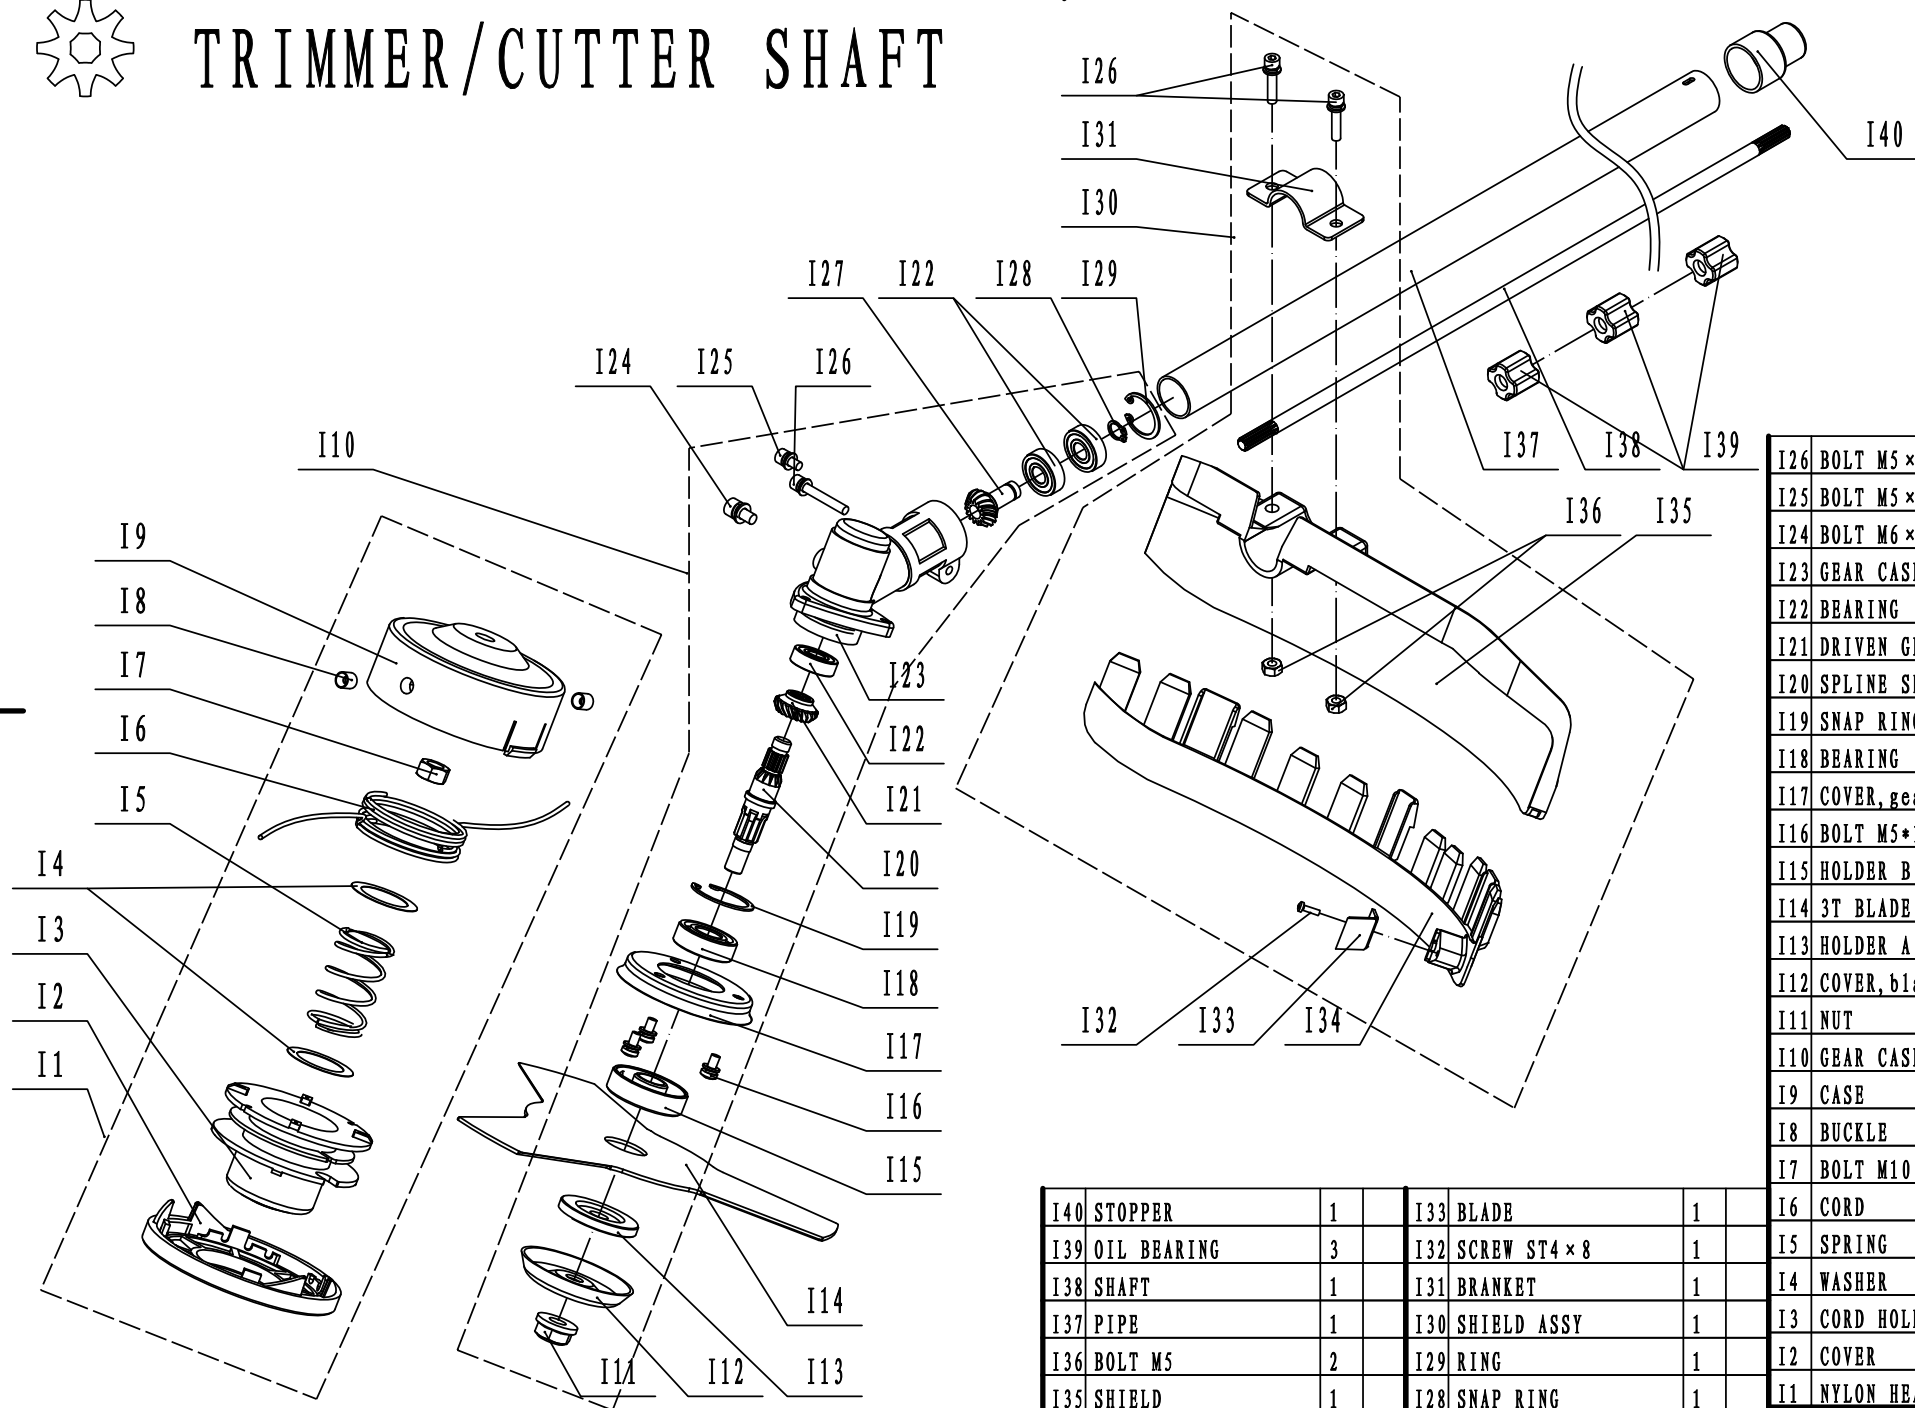

I26	BOLT M5×25	1	
I25	BOLT M5×12	1	
I24	BOLT M6×12	1	
I23	GEAR CASE	1	
I22	BEARING	3	
I21	DRIVEN GEAR	1	
I20	SPLINE SHAFT	1	
I19	SNAP RING	1	
I18	BEARING	1	
I17	COVER, gearcase	1	
I16	BOLT M5*10	3	
I15	HOLDER B	1	
I14	3T BLADE	1	
I13	HOLDER A	1	
I12	COVER, blade	1	
I11	NUT	1	
I10	GEAR CASE ASSY		
I9	CASE	1	
I8	BUCKLE	2	
I7	BOLT M10	1	
I6	CORD	1	
I5	SPRING	1	
I4	WASHER	2	
I3	CORD HOLDER	1	
I2	COVER	1	
I1	NYLON HEAD		
NO.	Description	Qty	Note

I40	STOPPER	1		I33	BLADE	1	
I39	OIL BEARING	3		I32	SCREW ST4×8	1	
I38	SHAFT	1		I31	BRANKET	1	
I37	PIPE	1		I30	SHIELD ASSY	1	
I36	BOLT M5	2		I29	RING	1	
I35	SHIELD	1		I28	SNAP RING	1	
I34	GUARD	1		I27	GEAR	1	

Workong Shaft

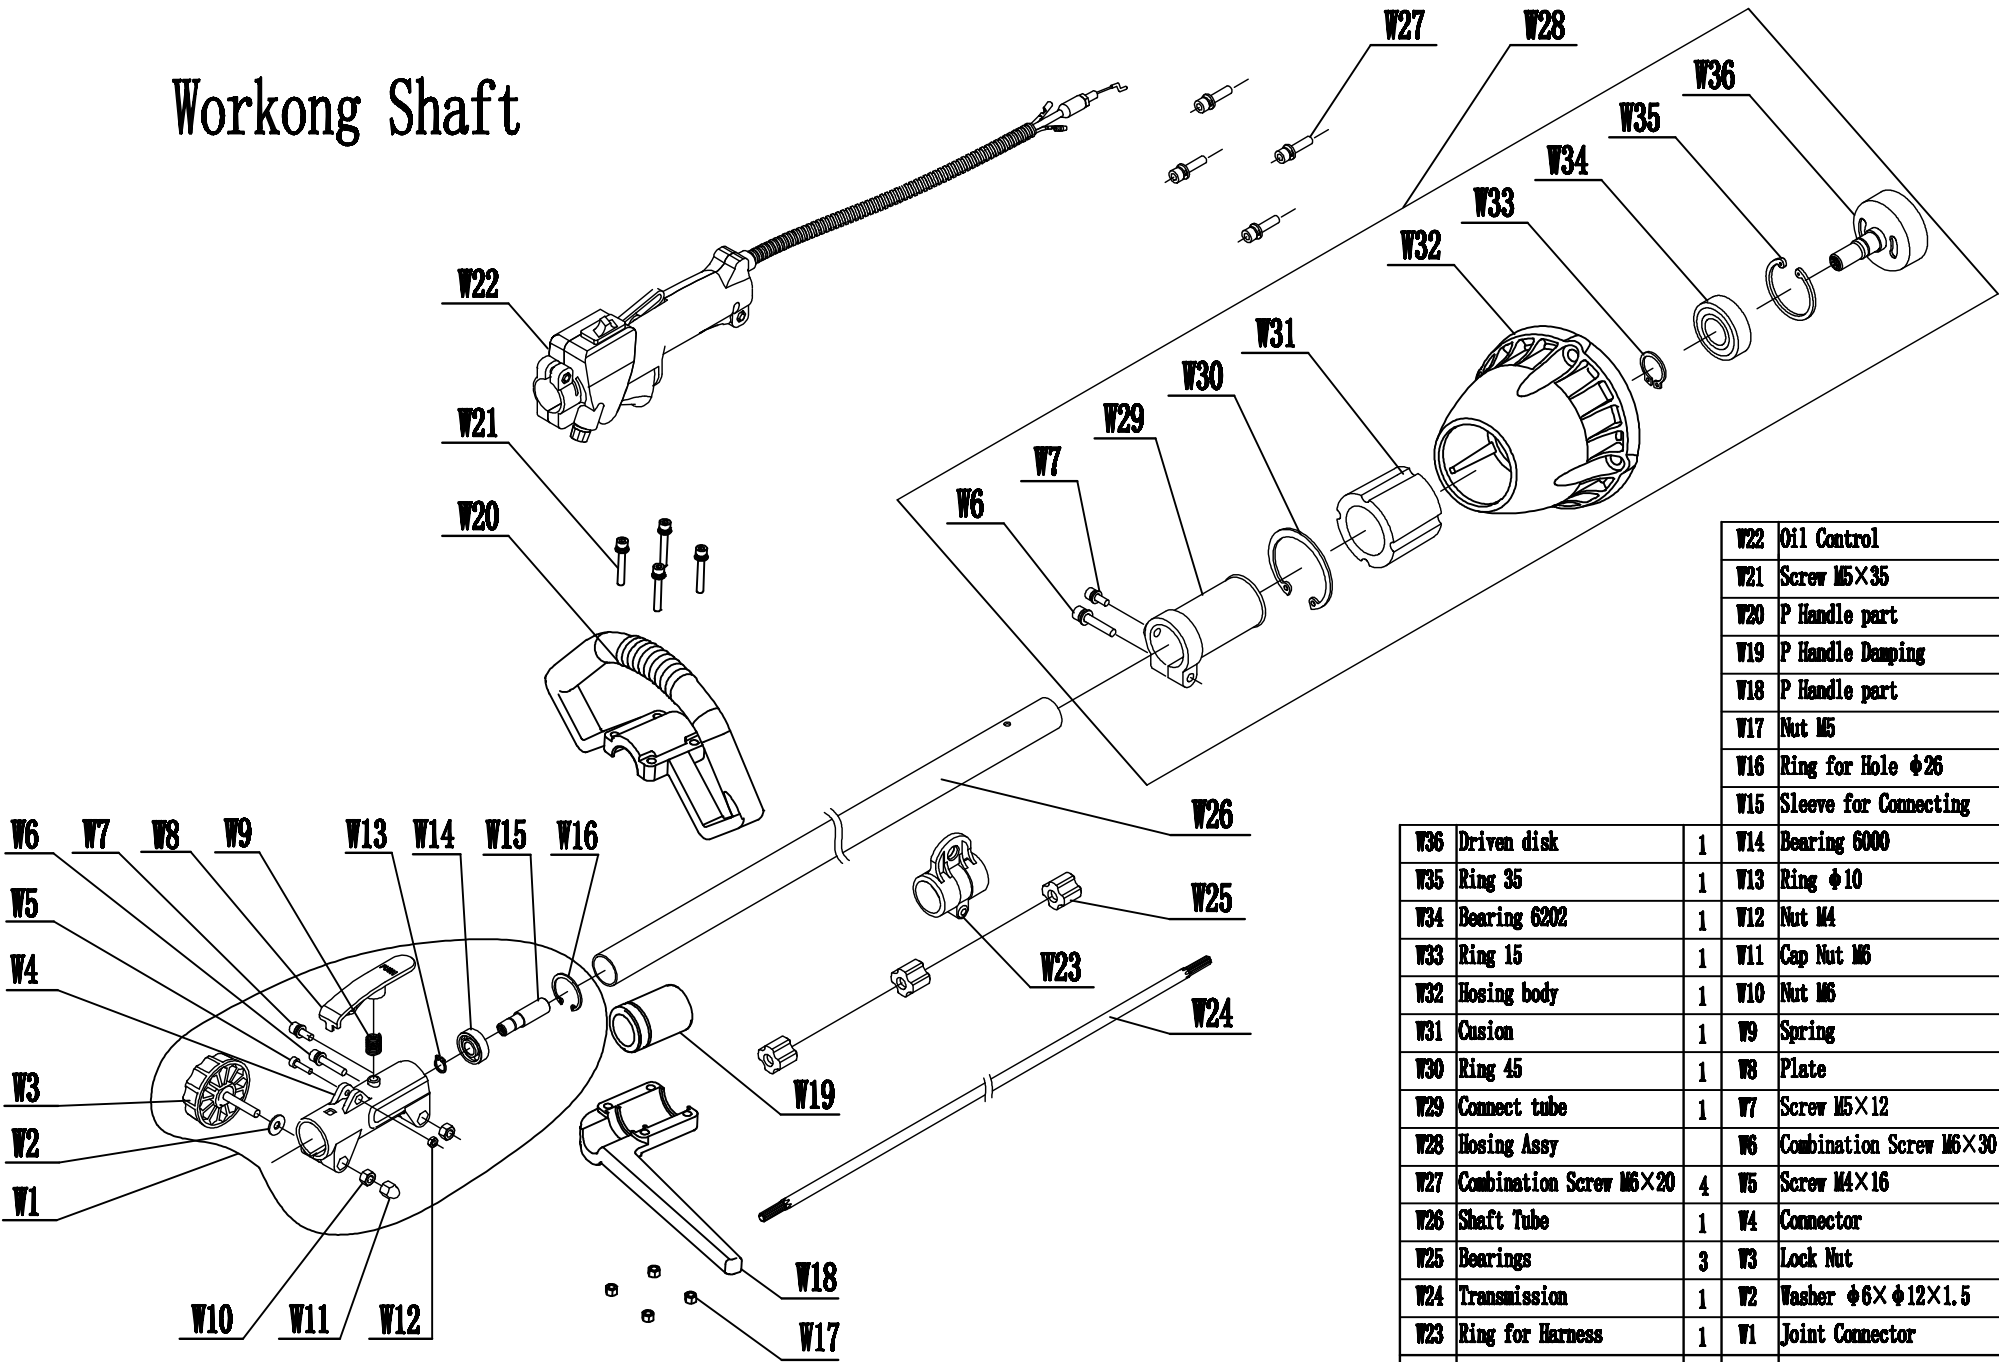

W22	Oil Control	1	W22	Oil Control	1
W21	Screw M5×35	4	W21	Screw M5×35	4
W20	P Handle part	1	W20	P Handle part	1
W19	P Handle Damping	1	W19	P Handle Damping	1
W18	P Handle part	1	W18	P Handle part	1
W17	Nut M5	4	W17	Nut M5	4
W16	Ring for Hole φ26	1	W16	Ring for Hole φ26	1
W15	Sleeve for Connecting	1	W15	Sleeve for Connecting	1
W14	Bearing 6000	1	W14	Bearing 6000	1
W13	Ring φ10	1	W13	Ring φ10	1
W12	Nut M4	1	W12	Nut M4	1
W11	Cap Nut M6	1	W11	Cap Nut M6	1
W10	Nut M6	2	W10	Nut M6	2
W9	Spring	1	W9	Spring	1
W8	Plate	1	W8	Plate	1
W7	Screw M5×12	2	W7	Screw M5×12	2
W6	Combination Screw M6×30	2	W6	Combination Screw M6×30	2
W5	Screw M4×16	1	W5	Screw M4×16	1
W4	Connector	1	W4	Connector	1
W3	Lock Nut	1	W3	Lock Nut	1
W2	Washer φ6×φ12×1.5	1	W2	Washer φ6×φ12×1.5	1
W1	Joint Connector		W1	Joint Connector	
NO	Name	Qty	NO	Name	Qty